


General  
 Ref: GTB 07a

Dec 2012  
 Sheet 1

## Canaline Panel Cut-out Dimensions.

An aperture needs to be cut in the fascia panel to accept the Canaline Start Panels. Cut-out dimensions are as shown below for the 3 panel options:..

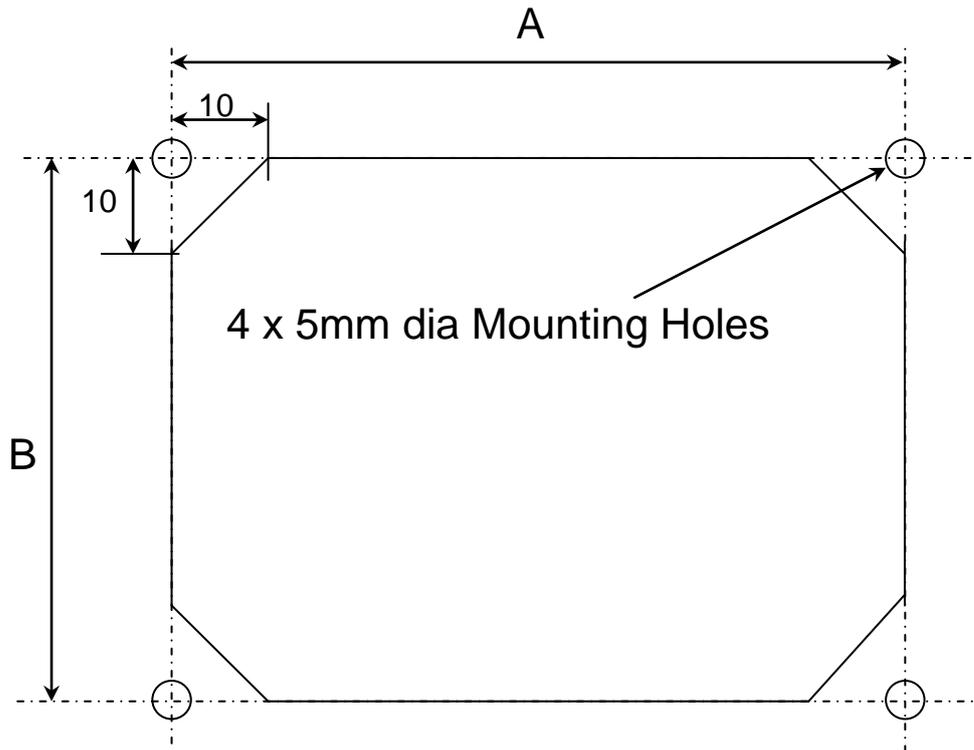

Dimensions (mm)	A	B
Compact Panel	142	136
Intermediate Panel	167	143
Deluxe Panel	236	197

We recommend a minimum clearance depth of 140mm behind the panel, but 150mm is ideal.